


## How to replace an ATX Bracket with a Low Profile Bracket on the SAPPHIRE GPRO 4300


### STEP 1

- ⦿ Remove the 4 screws to disconnect the shroud.
- \* Two screws on each side as indicated in the diagram.

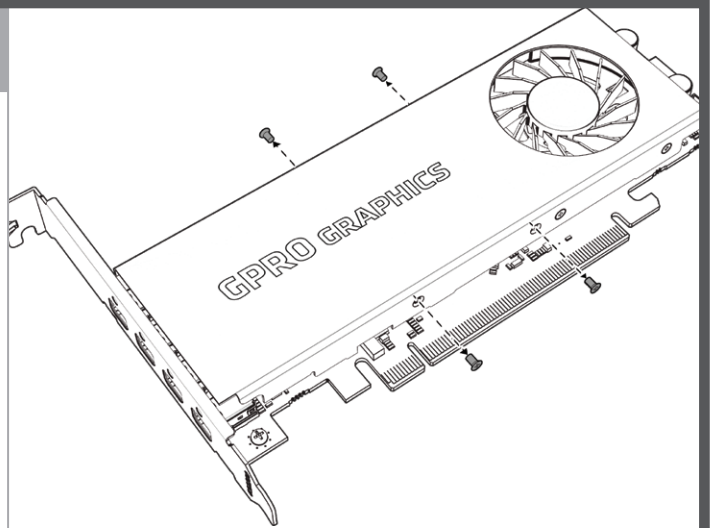

### STEP 2

- ⦿ When the 4 screws have been removed, carefully lift up the shroud ensuring that the power cable connected to the rear side of the graphics board does not become disconnected.

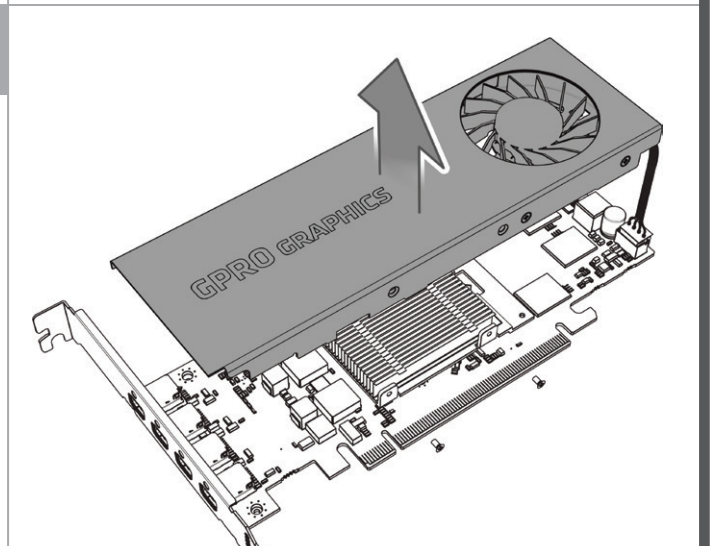

### STEP 3

- ⦿ After lifting up the shroud, remove the two screws holding the bracket.
- ⦿ Detach the bracket from the graphics board and replace with the Low Profile Bracket before attaching it securely to the board using the two screws.
- ⦿ Fit the shroud back in its place, and secure it using the 4 screws. It is important that the shroud is fitted securely to ensure the cooling fan provides sufficient airflow to the GPU.

